 


MuVo Audio Player

How to Use Your Player

Inserting the Battery

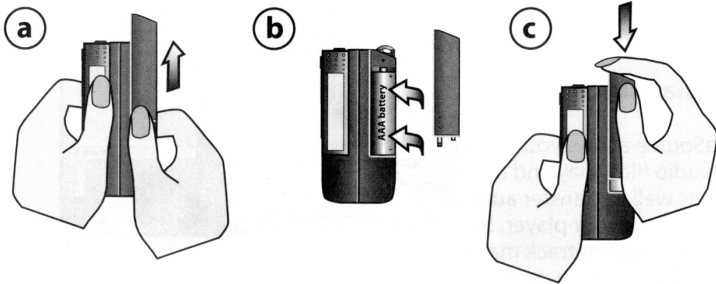


If the LED on the player blinks red, the battery power is low. If the LED on the player is a steady red, there are no tracks in your player.

The battery life depends on the type of battery used. It is recommended that you use alkaline batteries. Playing WMA files with a high bass level may reduce your battery's life significantly.

Listening to eAudio with Your MuVo

Turning Your Player On

Plug your headphones into the headphones connector on top of your MuVo. Press and hold the **Play/Pause**  button for five seconds until the LED turns green. Audio playback starts. If there are no audio tracks in your player, the LED turns red.



Turning Your Player Off

Press and hold the **Play/Pause**  button for five seconds until after the LED turns off.







If you turn off the device while listening to an eAudio track, your MuVo automatically continues from where you left off when you next turn on your MuVo.

Managing Audio Tracks and eAudio Programs on Your MuVo

Skipping to the next or previous eAudio program



Press the Next Track/Fast Forward  or Previous Track/Rewind  button once.

Skipping through sections inside an eAudio program

1. Press the Repeat A-B /Track  button. The LED blinks green rapidly.
2. Press the Next Track/Fast Forward  or Previous Track/Rewind  button until you find the section you want.
3. Press the Repeat A-B /Track  button. The LED turns a steady green.

There is no change to playback when you try to skip past the last section of a program. When you try to skip back from the first section of a program, the player skips to the beginning of the program instead.





Scanning Through an Audio Track or eAudio Program

Press and hold down the Next Track/Fast Forward  or Previous Track/Rewind  button. The scan rate increases the longer you hold down either button.




Pausing playback

Press the Play/Pause  button. The LED turns red.


Repeating an audio track

Press and hold the Repeat A-B /Track  button for a few seconds. The LED blinks green. To resume normal playback, press and hold the Repeat A-B /Track  button again.

Repeating a portion of an audio track

Press the **Repeat A-B (A-B)/Track**  button to mark the beginning of the portion you wish to repeat. The LED blinks green. Press the **Repeat A-B (A-B)/Track**  button again to mark the end of the portion. The LED blinks green at a slower speed, and the marked portion is played back repeatedly. To resume normal playback, press the **Repeat A-B (A-B)/Track**  button again.


Overview

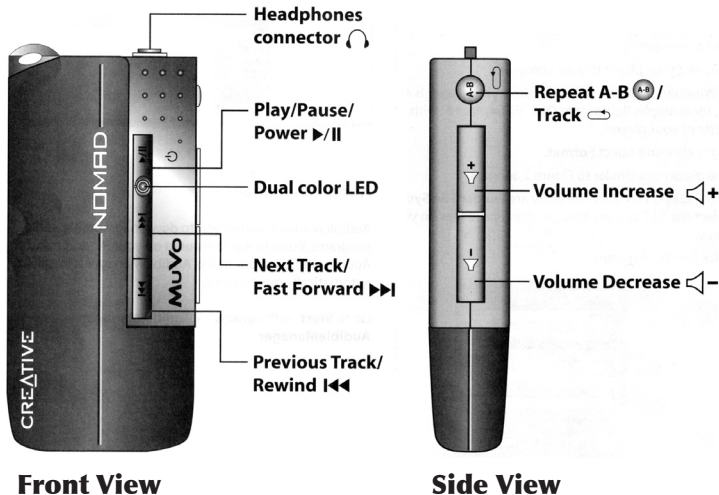

MuVo Audio Player

How to Use Your Player

Inserting the Battery

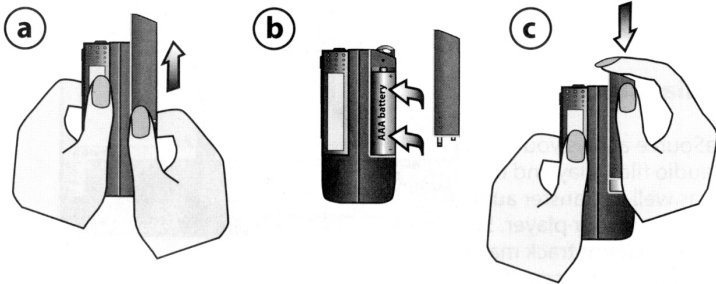

If the LED on the player blinks red, the battery power is low. If the LED on the player is a steady red, there are no tracks in your player.

The battery life depends on the type of battery used. It is recommended that you use alkaline batteries. Playing WMA files with a high bass level may reduce your battery's life significantly.